

INSTALLATION NOTES FOR POWER SUPPLY

1. DC CABLES WILL PASS THROUGH THE WALL (ONE INCH DIAMETER HOLE) APPROXIMATELY 6-12 INCHES ABOVE THE FLOOR, ON THE **LEFT SIDE OF THE SEAT, CENTERLINE AS YOU FACE THE TOILET SEAT.** YOUR CABLE SHOULD EXTEND OUT FROM THE WALL 12 INCHES. YOUR WALL PLATE MUST BE **NO MORE THAN 6 INCHES** TO THE LEFT OF THE COMMUNE.
2. OUR SEAT CABLE IS 24 INCHES LONG; WE PROVIDE CONNECTION POINT TO POWER CABLE ACCORDINGLY.
3. D/C OUTPUT CABLES ARE TO BE SIZED ACCORDING TO THE DIAGRAM SUPPLIED. **DO NOT USE BELL WIRE. USE ONLY 14 GAUGE STRANDED WIRE;** USE RED WIRE FOR POSITIVE AND BLACK WIRE FOR **NEGATIVE**.
4. IF INSTALLING ONE (1) POWER SUPPLY FOR TWO (2) WASHROOMS AND/OR MULTIPLE SEATS, CENTER THE POWER SUPPLY BETWEEN THE LOCATIONS.
5. **NO LOOPING OF WIRES.** EACH SEAT IS WIRED DIRECTLY BACK TO DC SIDE OF POWER SUPPLY. **IF WIRES ARE LOOPED, BELLA BAGNO, INC. WILL NOT INSTALL THE HYGOLET SEATS. YOU WILL BE CHARGED ACCORDINGLY FOR OUR INSTALLERS** TO RETURN WHEN THE POWER SUPPLY INSTALLATION IS PROPERLY COMPLETED.

6. **USE CRIMP LUGS FOR CABLE CONNECTION ON DC OUTPUT TERMINALS OF POWER SUPPLY.**

7. ON POWER SUPPLIES WITH MULTIPLE OUTPUT CONNECTIONS, DISTRIBUTE POWER CABLE CONNECTIONS EQUALLY BETWEEN OUTPUT “ + “ AND “ – “ **PAIRS.**

8. POWER SUPPLY 110 VOLT AC LEADS: BLACK IS HOT, WHITE IS NEUTRAL; CONDUIT IS TO BE USED ON THE AC SIDE OF THE POWER SUPPLY (IT IS NOT NECESSARY TO USE CONDUIT ON THE DC SIDE OF THE POWER SUPPLY); CONNECT TO **UNSWITCHED** POWER SOURCE.

9. PLEASE CALL 847-673-SEAT (7328) FOR ANY ADDITIONAL QUESTIONS CONCERNING INSTALLATION.


WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT INTERCONNECT OUTPUT TERMINATIONS.

HOLE IN THE WALL TO BE 1" INCH IN DIAMETER.

SEAT CABLE WILL PASS THROUGH A 5/16" HOLE, DRILLED THROUGH THE CENTER OF A STAINLESS STEEL WALL PLATE, MEASURING 2-3/4" BY 4-1/2".

WALL PLATE SHOULD BE ANCHORED TO THE WALL USING TWO (2) #10 PLASTIC ANCHORS AND TWO (2) #12 PHILLIPS HEAD SHEET METAL SCREWS.

THIS SHOULD BE FURNISHED BY YOUR ELECTRICIAN.

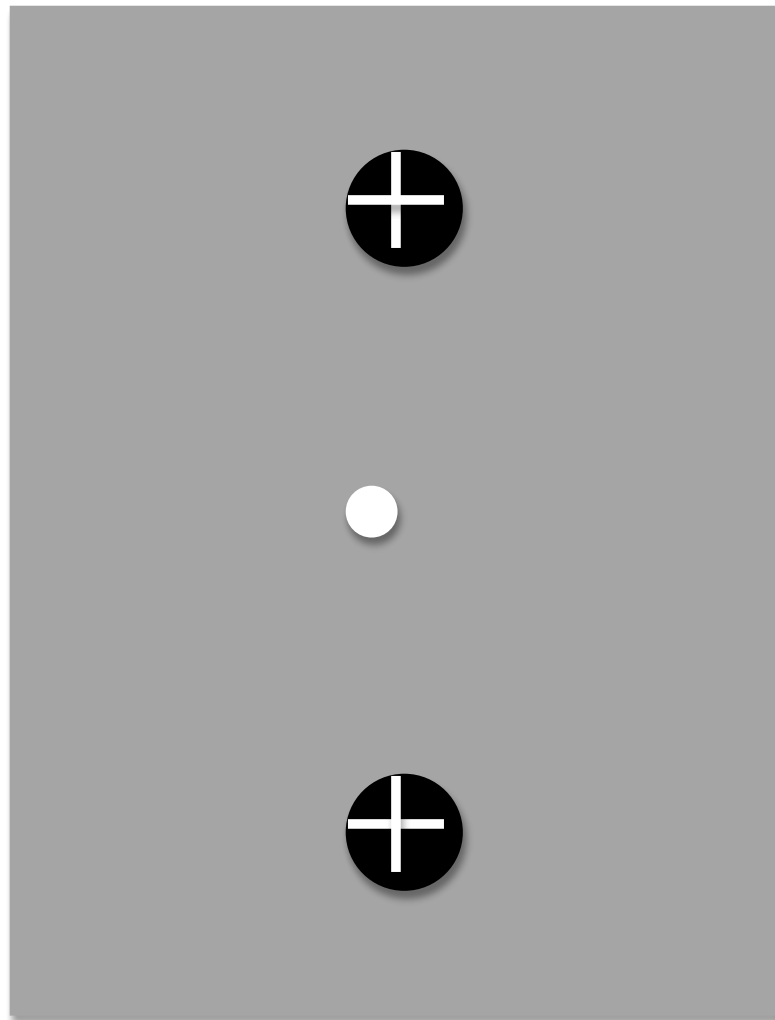


BELLA BAGNO INC. - HYGOLET S3000

POWER SUPPLY - WIRE DIAGRAM

CLASS 2 UL LISTED
POWER SUPPLY S9

14 GAUGE STRANDED ONLY

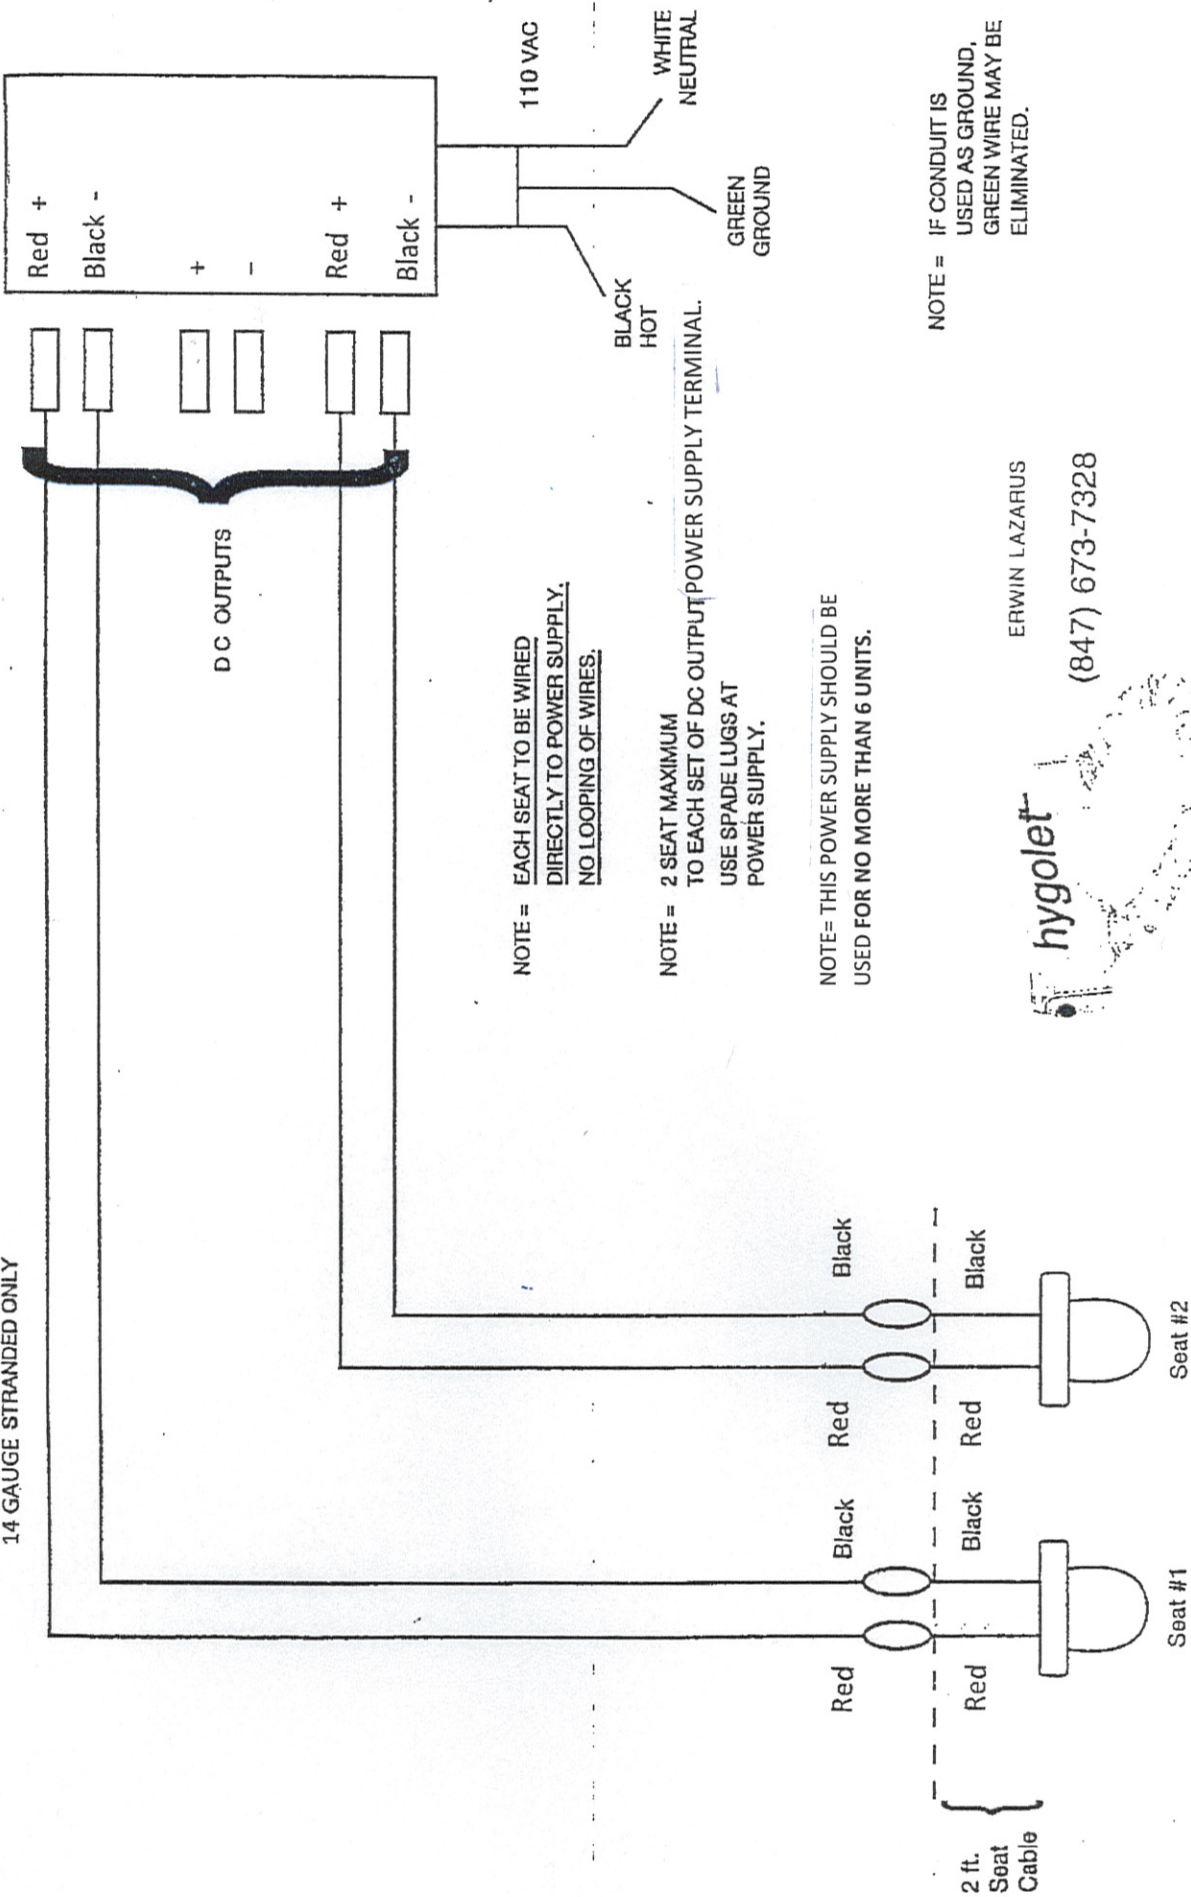

NOTE = EACH SEAT TO BE WIRED DIRECTLY TO POWER SUPPLY. NO LOOPING OF WIRES.

NOTE = 2 SEAT MAXIMUM TO EACH SET OF DC OUTPUT POWER SUPPLY TERMINAL. USE SPADE LUGS AT POWER SUPPLY.

NOTE = THIS POWER SUPPLY SHOULD BE USED FOR NO MORE THAN 6 UNITS.

NOTE = IF CONDUIT IS USED AS GROUND, GREEN WIRE MAY BE ELIMINATED.

ERWIN LAZARUS
(847) 673-7328



Bella Bagno Inc.

5500 W. TOUHY AVE., UNIT E, SKOKIE, ILLINOIS 60077